

Deck Max TM _®

The secret fixing solution for decking

www.deck-max.com.au

Deck-Max TM - Original Hidden Fastener

One Stop Shop - "Original Clip"



“The Market Leaders in Decking”

Copyright © 2020. All Rights Reserved.



20 Kit - Coverage is approx. 20 Square metres based on board width of 100mm.

Suits Timber OR Metal frames

Includes:

- 400 Deck Clips
- 400 Screws
- 4 x 300ml cartridges Ultraset Acoustic membrane
- 1 x Combo Pack - drill bit & sq. drive
- 30 Butt Joiners



5 Kit - Coverage is approx. 5 Square metres based on board width of 100mm.

Suits Timber OR Metal frames

Includes:

- 100 Deck Clips
- 100 Screws
- 1 x 300ml cartridges Adhesive
- 1 x Combo Pack - drill bit & sq. drive
- 15 Butt Joiners


WHAT'S IN A KIT...



Original Clip - sets a 4.5mm gap allowing for expansion and contraction.



Cut or (Kerf) cut into the side of the board using the Biscuit Cutter.

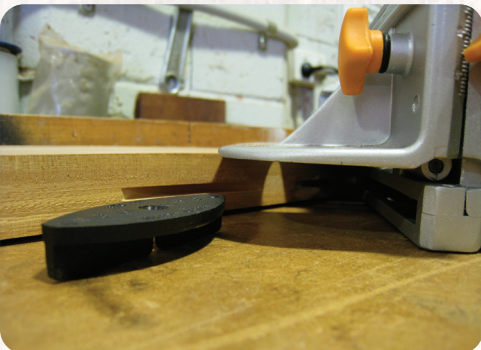

Biscuit Cutter will prepare the cut in the side of the board.



Ask us for Technical Data Sheet for installation instructions.




Butt Joiners - for mitred corners, picture frame joints, Butt Joints



Butt Joint - Join on Joist inserting the Butt joiner and fixing the original clip to the side.



Original Clip and Butt Joiners used to join on the joist.

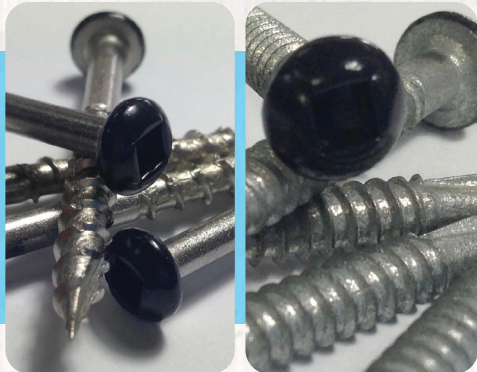

Screws - Self Drilling timber screws & OR Self drilling for metal frames.



Bostik Ultra Set - 300ml cartridge - coverage approx. 5 square metres. Provides an acoustic membrane between the boards and the top of the joists.



Combo Pack - 1 x 100mm long drill bit x 3mm. This drill bit provides the perfect pilot hole for the screws.

STANDARD ADD ON ITEMS PEOPLE CHOOSE

Click to Launch Video Clips



Wood Plug Kit for perfect deck boat finish - includes 50 plugs + 50 screws

#DM 4277



CounterBore Tool - this prepares the perfect hole to match the DeckMax Wood Plug & Screw

#DM 4253



Drill Bits - replacement drill bits for the CounterBore tool

Pack of 3

DM 428



Square Drive bits - 2 x 100mm long
2 square drive bits

Best for excellent visual into the screw head.


DM 4154



Bostik Wipes - This is perfect to removes any spilt Ultraset - cleans up tools and hands.

DM 2014

DECKING CLAMPS

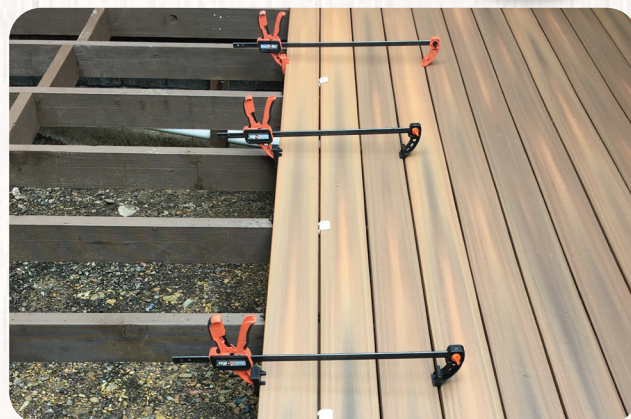

These Decking Clamps are a dual clamp for deck installation and or simply change the head for standard clamp applications. See photo above. This clamp is essential essential in maintaining the set 4mm gaps during installation - refer to the install guide.

RECOMMENDED PRODUCTS FOR FINISHING THE DECK



Power Prep

- Standard first step in cleaning the raw timber. This will bring out the tannins remaining in the hardwood.
- Ratio 1:1
- # DM 4707 (1 x litre)



Reviver

- Standard Second step in cleaning the Power Prep off the timber deck. Be sure to remove all the residual chemicals before applying the Ultra Deck coatings.
- Ratio 4:1 (1 part Reviver)
- # DM 4706 (1 x litre)



Ultra Deck - natural

- Once the reviver has been washed off - then apply 3 x coats as per specification.
- # DM 4701 (4 litre)



Applicator and Handle



Bucket



Deck Brush

These ACCESSORIES are perfect for your second coat/ re coat "all washable in water"